























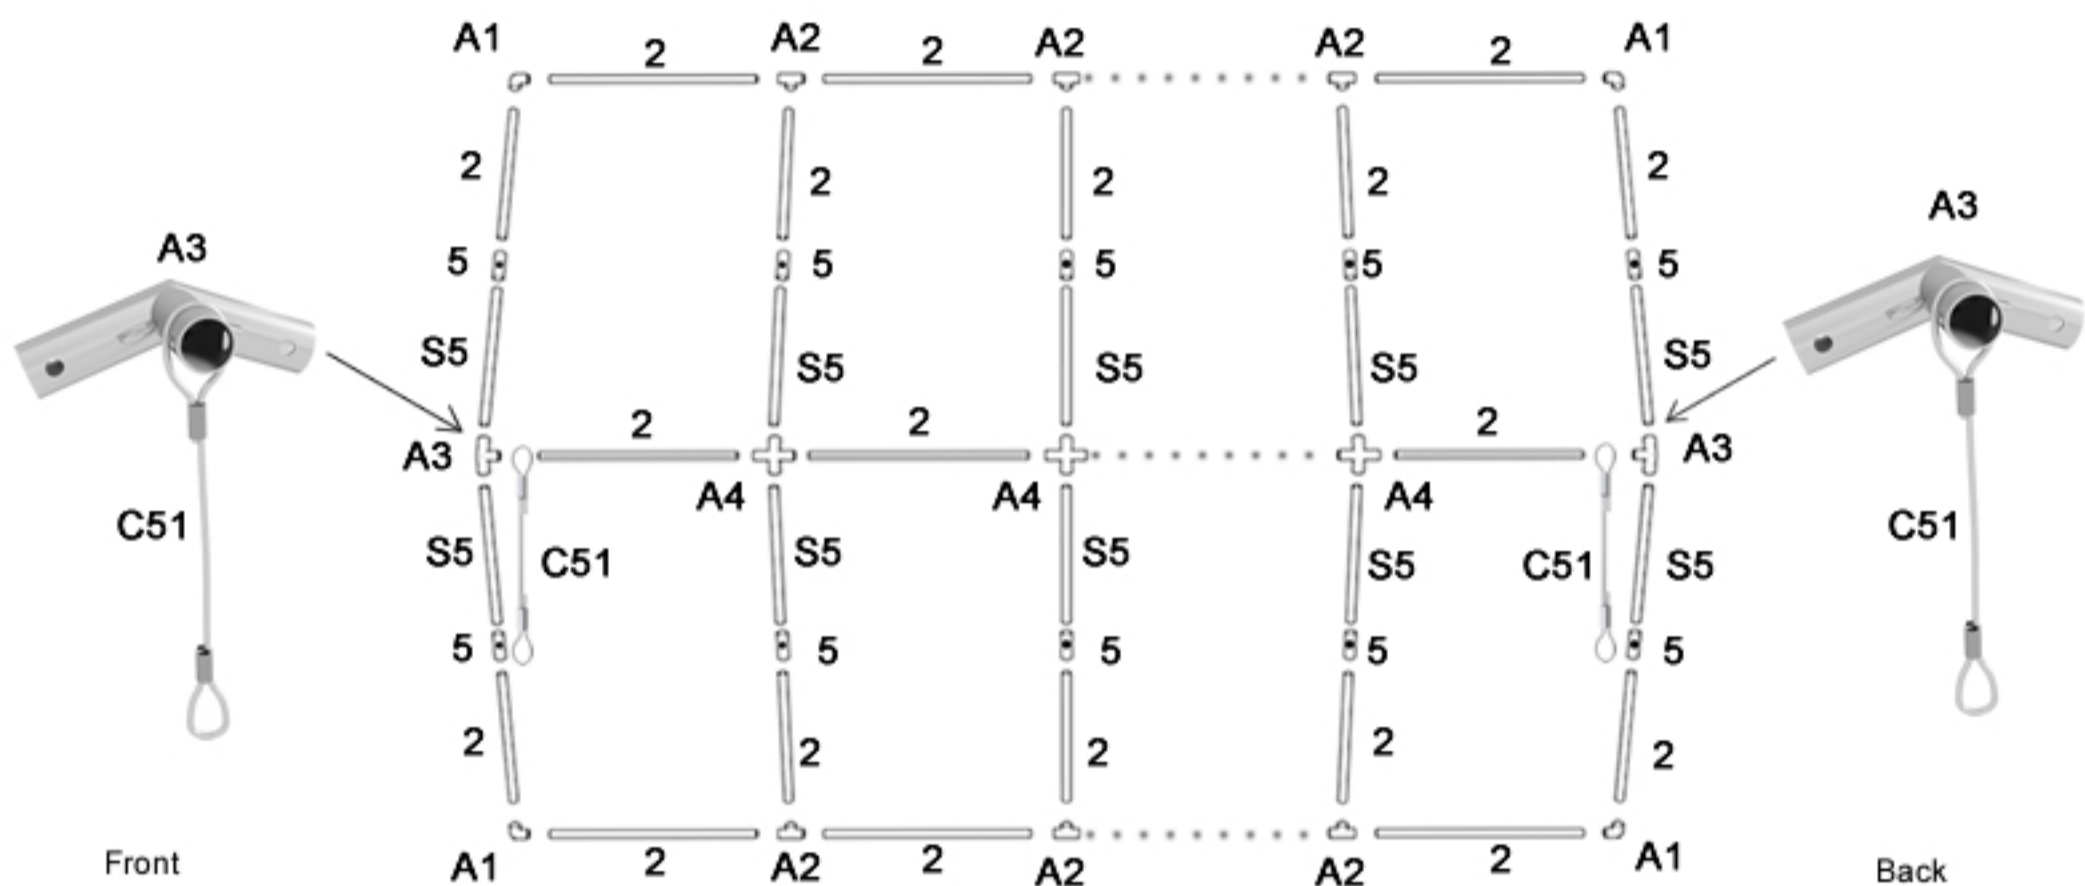
Name	No.	Picture	5 x 6	5 x 8	5x10	Extra 2 m	Extra 1 m
Leg tube dia. 38 mm (Φ) (1895 mm)	1		8	10	12	2	2
Tube dia. 38 mm (Φ) (1930 mm)	2		17	22	27	5	2
Tubw dia. 38 mm (Φ) (940 mm)	3						3
Roof connection tube (500mm)	4						
Roof connection tube (200mm)	5		8	10	12	2	2
Steel rod	6						
Tumbuckle	7						
Peg 8x300mm	11		4	4	4		
Peg 6x180mm	12		8	10	12	2	2
Peg 4x180mm	13		42	48	54	6	6
String	14		4	4	4		
Screw M6x20	15		4	4	4		
Screw M6x50	16		60	76	92	16	16
Metal loop to mount the entrance	18		16	16	16		
Side triple connector (110°)	A1		4	4	4		
Side quad connector(110°)	A2		4	6	8	2	2
Top triple connector (140°)	A3		2	2	2		
Top quad comer (140°)	A4		2	3	4	1	1
Tube dia. 38 mm (Φ) (500 mm)	S5		8	10	12	2	2
Vertical entry link (500 mm)	C51		2				
Horizontal entry link (2410 mm)	C52		2				
Entrance mounting bracket	S0		4				

**STEP 1**

The tent should be deployed on the flat surface.


**For the tents with the even length of the side** eg. 8m, 10m, 12m, 20m, 30m, .....

Distribute the parts as pictured below. Connect all the dia. 38 mm ( $\Phi$ ) tubes with the connectors using the M6x50 screws. Mount a vertical entry link (**C51**) on the triple corner connector (**A3**).




**For the tents with the uneven length of the side** eg. 9m, 11m, 13m, 21m, 31m.....

Distribute the parts as pictured below. Connect all the dia. 38 mm ( $\Phi$ ) tubes with the connectors using the M6x50 screws. Mount a vertical entry link (**C51**) on the triple corner connector (**A3**).

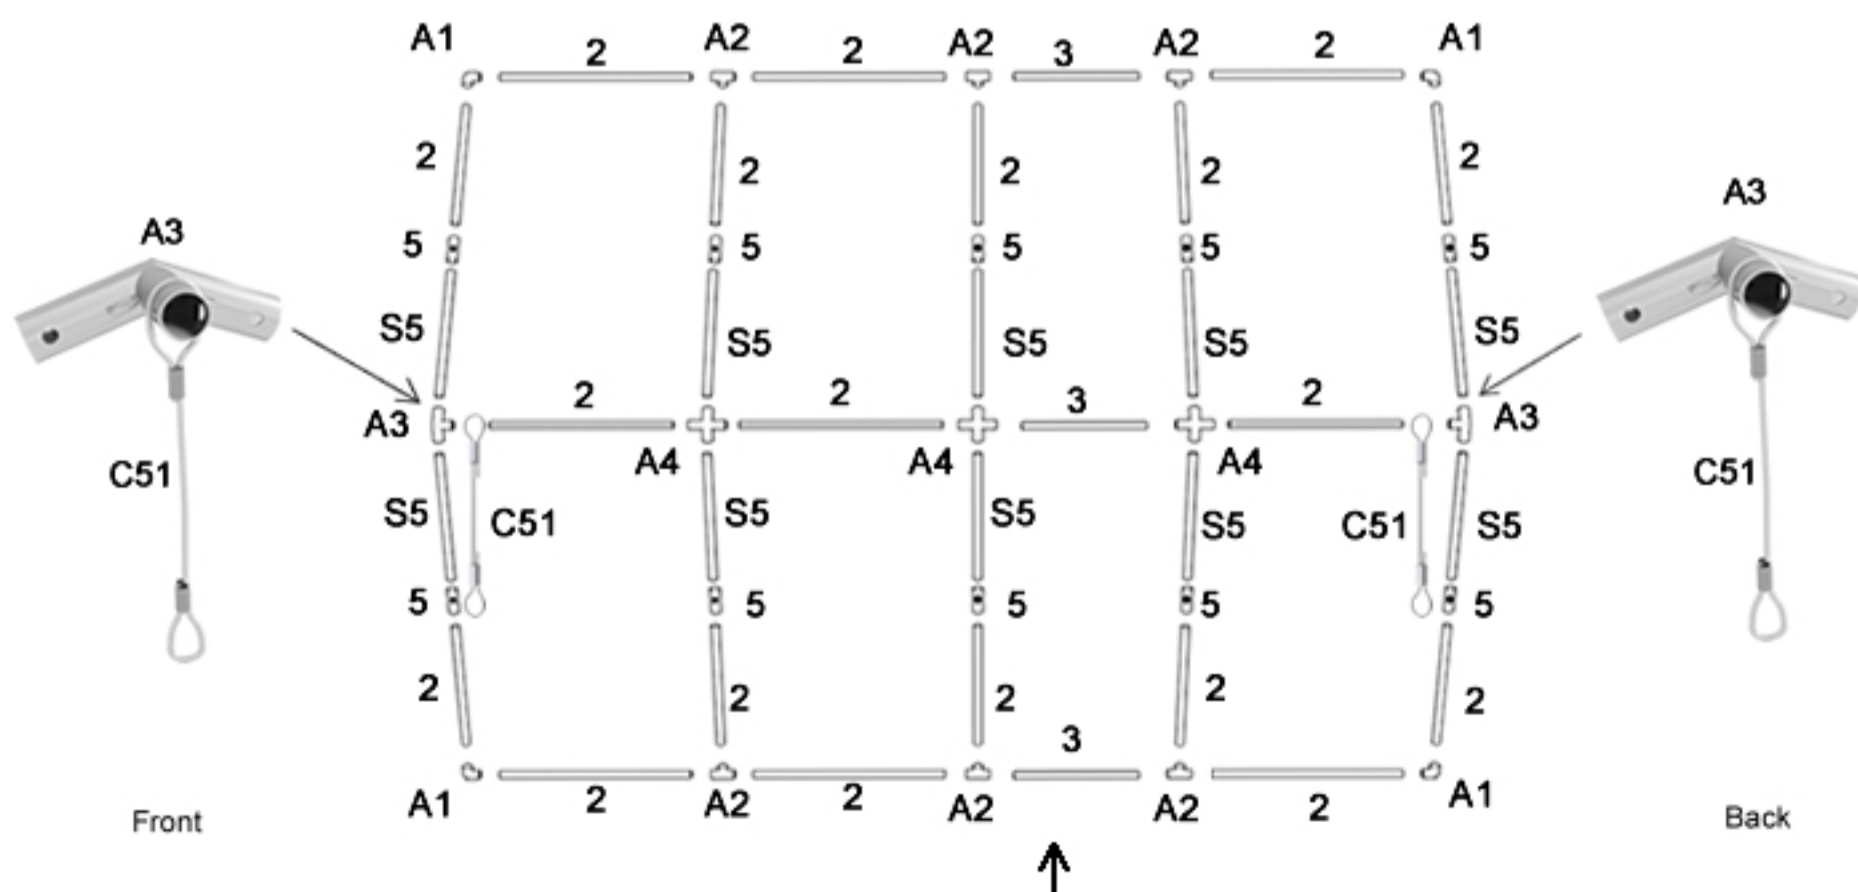


The extension tube (**3**) should be located in the third section.

## STEP 2/a

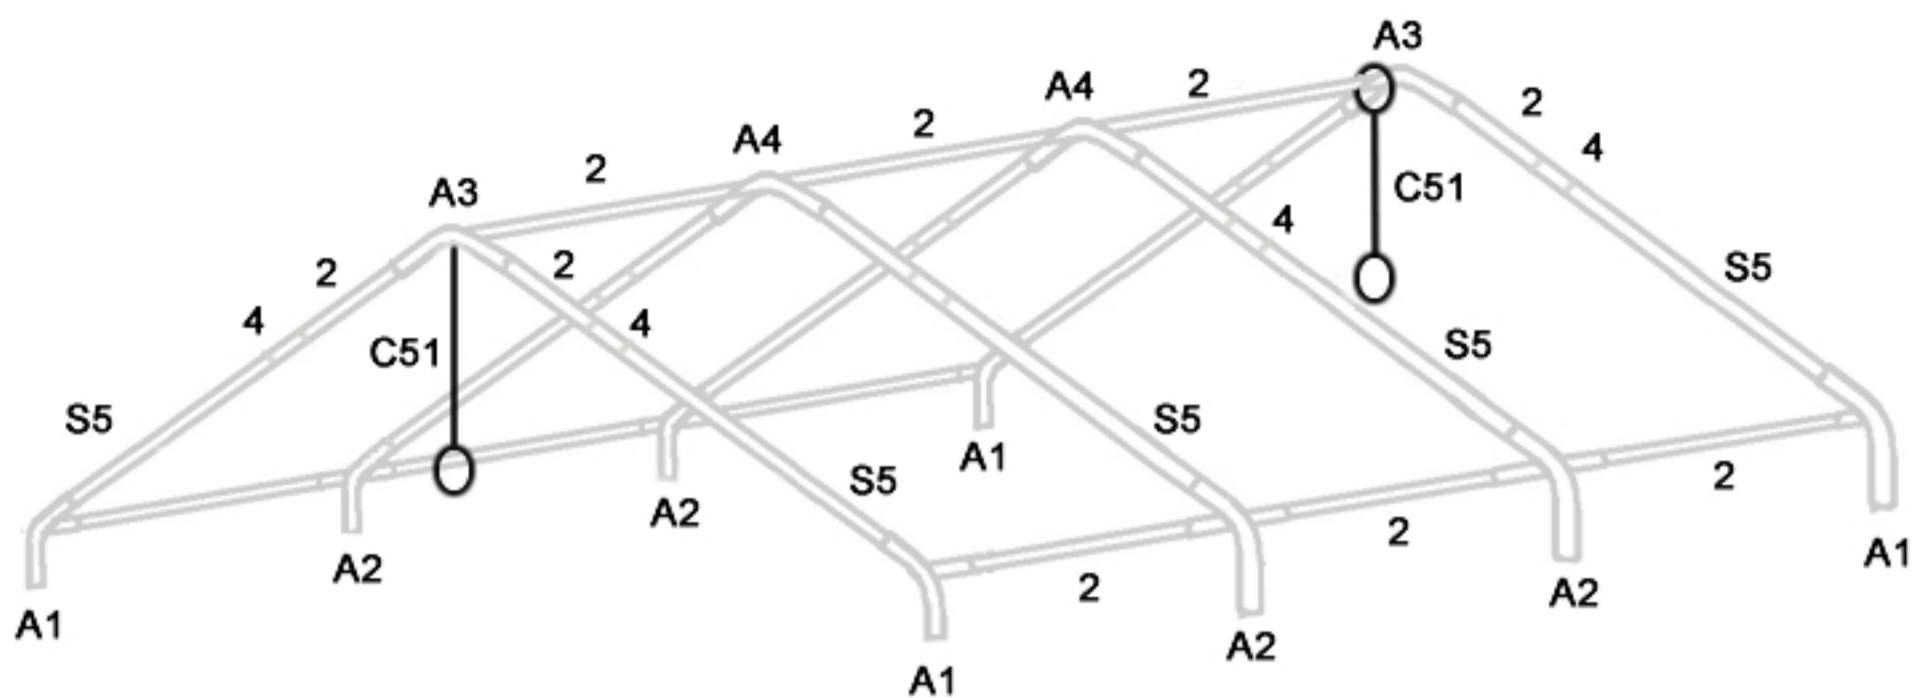

The assembled elements should look like pictured above.

Mount the bracket to secure the entry (**S0**) on the both sides of the tent. Using the screws (**15**) connect the brackets using the horizontal entry link (**C52**) which should come through the already mounted vertical link (**C51**).


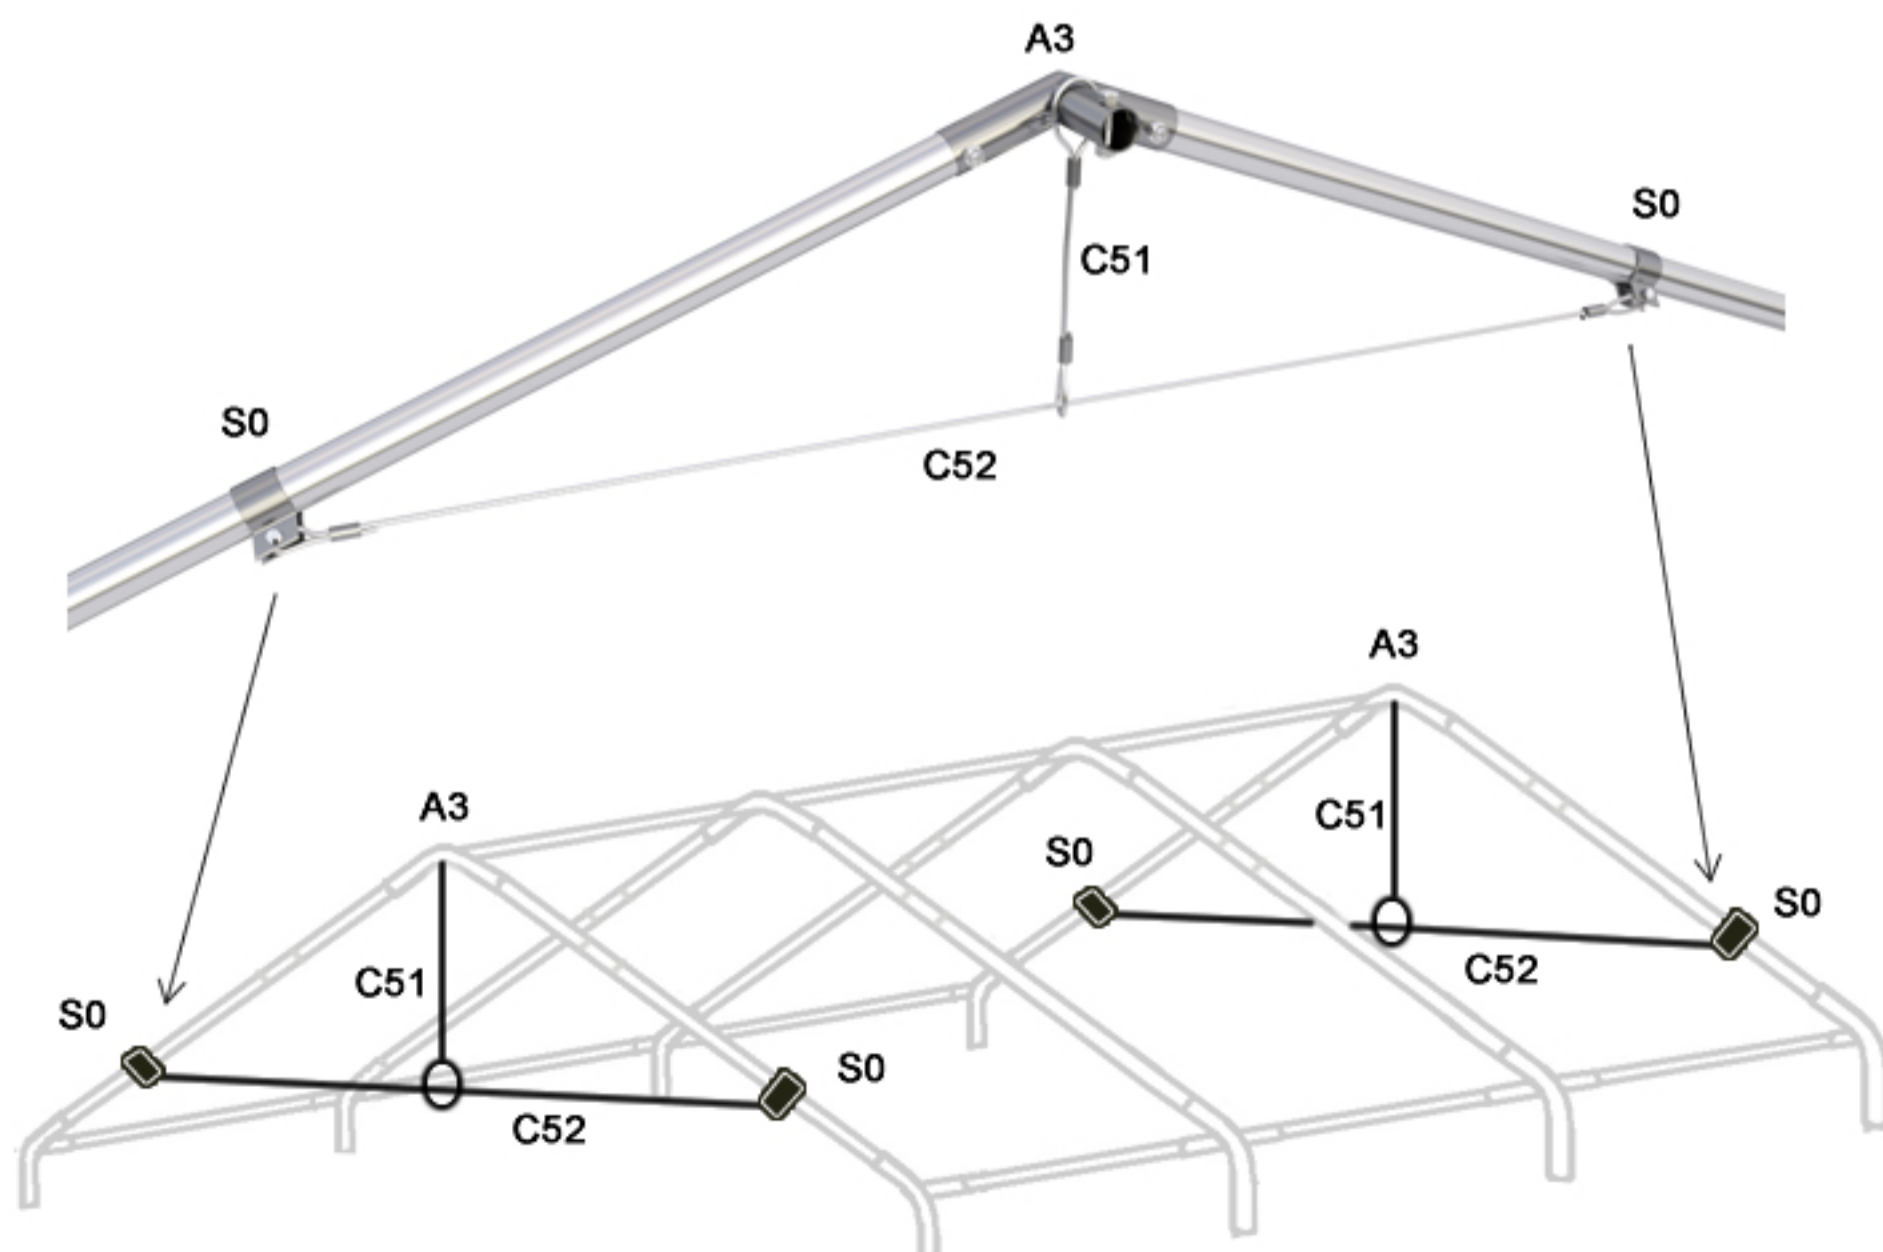


## STEP 3

Gently lift the tent on one side and mount the pipes **(1)**. The tent's feet should be mounted with their hole outside. Next lift the tent on the other side and repeat the action.



Side panels should be mounted directly to the roof using the velcro stripes. Sides of the panels should be mounted using the elastic rubber with the ball.

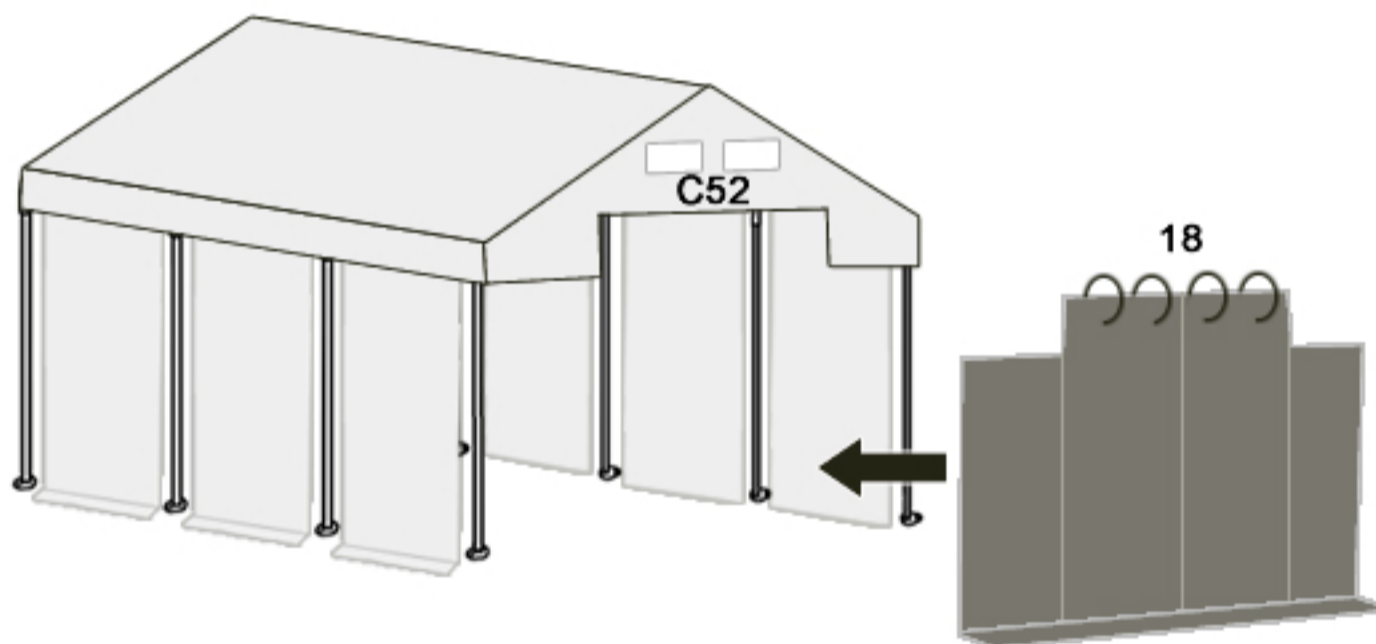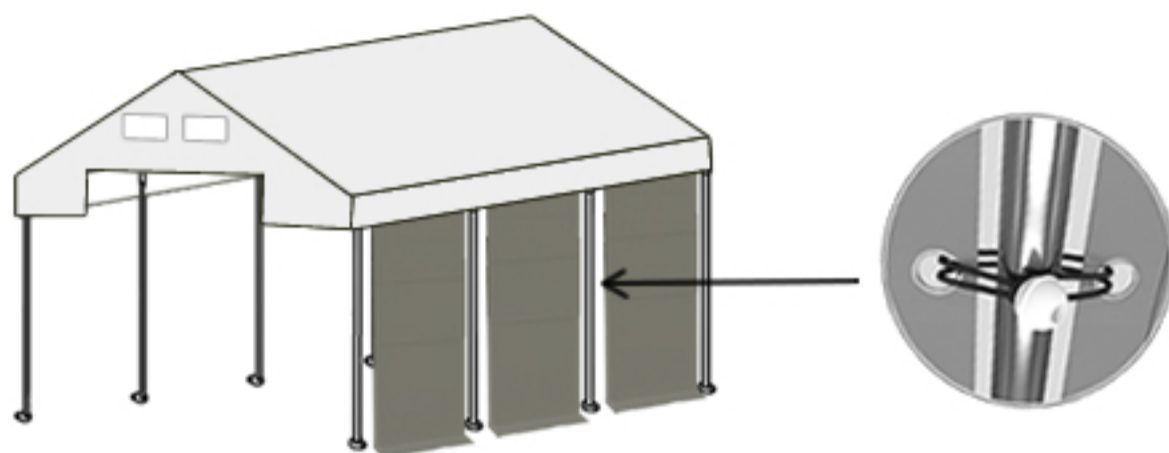

The upper part of the entrance using the metal brackets **(18)** to the vertical rope **(C52)**. The sides of the entrance should be mounted using the elastic rubber with the ball.

Mount the masking stripes. One of each of the four wider masking stripes should be installed on the each corner of the tent.

Fix the roof pulls on the corners of the tent using the **(14)** and **(11)** parts. All the lines should be tight.

