






















Name	No.	Picture	3 x 2	3 x 4	3 x 6	3 x 8	Extra 2 m	Extra 1 m
Leg tube dia. 38 mm (Φ) (1895 mm)	1		4	6	8	10	2	2
Tube dia. 38 mm (Φ) (1930 mm)	2		3	6	9	12	3	
Tube dia. 38 mm (Φ) (940 mm)	3							3
Roof connection tube (500mm)	4							
Roof connection tube (200mm)	5							
Steel rod	6							
Tumbuckle	7							
Peg 8x300 mm	11		4	4	4	4		
Peg 6x180 mm	12		4	6	8	10	2	2
Peg 4x180 mm	13		26	32	38	44	6	6
String	14		4	4	4	4		
Screw M6x20	15		4	4	4	4		
Screw M6x50	16		23	36	49	62	13	13
Metal loop to mount the entrance	18		12	12	12	12		
Comer triple connector (120°)	B1		6	6	6	6		
Side quad connector (120°)	B2			3	6	9	3	3
Tube dia. 38 mm (Φ) (1520 mm)	S3		4	6	8	10	2	2
Vertical entry link (500 mm)	C31		2	2				
Horizontal entry link (1670 mm)	C32		2	2				
Entrance mounting bracket	S0		4	4				

STEP 1

The tent should be deployed on the flat surface.


For the tents with the even length of the side eg. 8m, 10m, 12m, 20m, 30m,

Distribute the parts as pictured below. Connect all the dia. 38 mm (Φ) tubes with the connectors using the M6x50 screws. Mount a vertical entry link (**C31**) on the triple corner connector (**B1**).

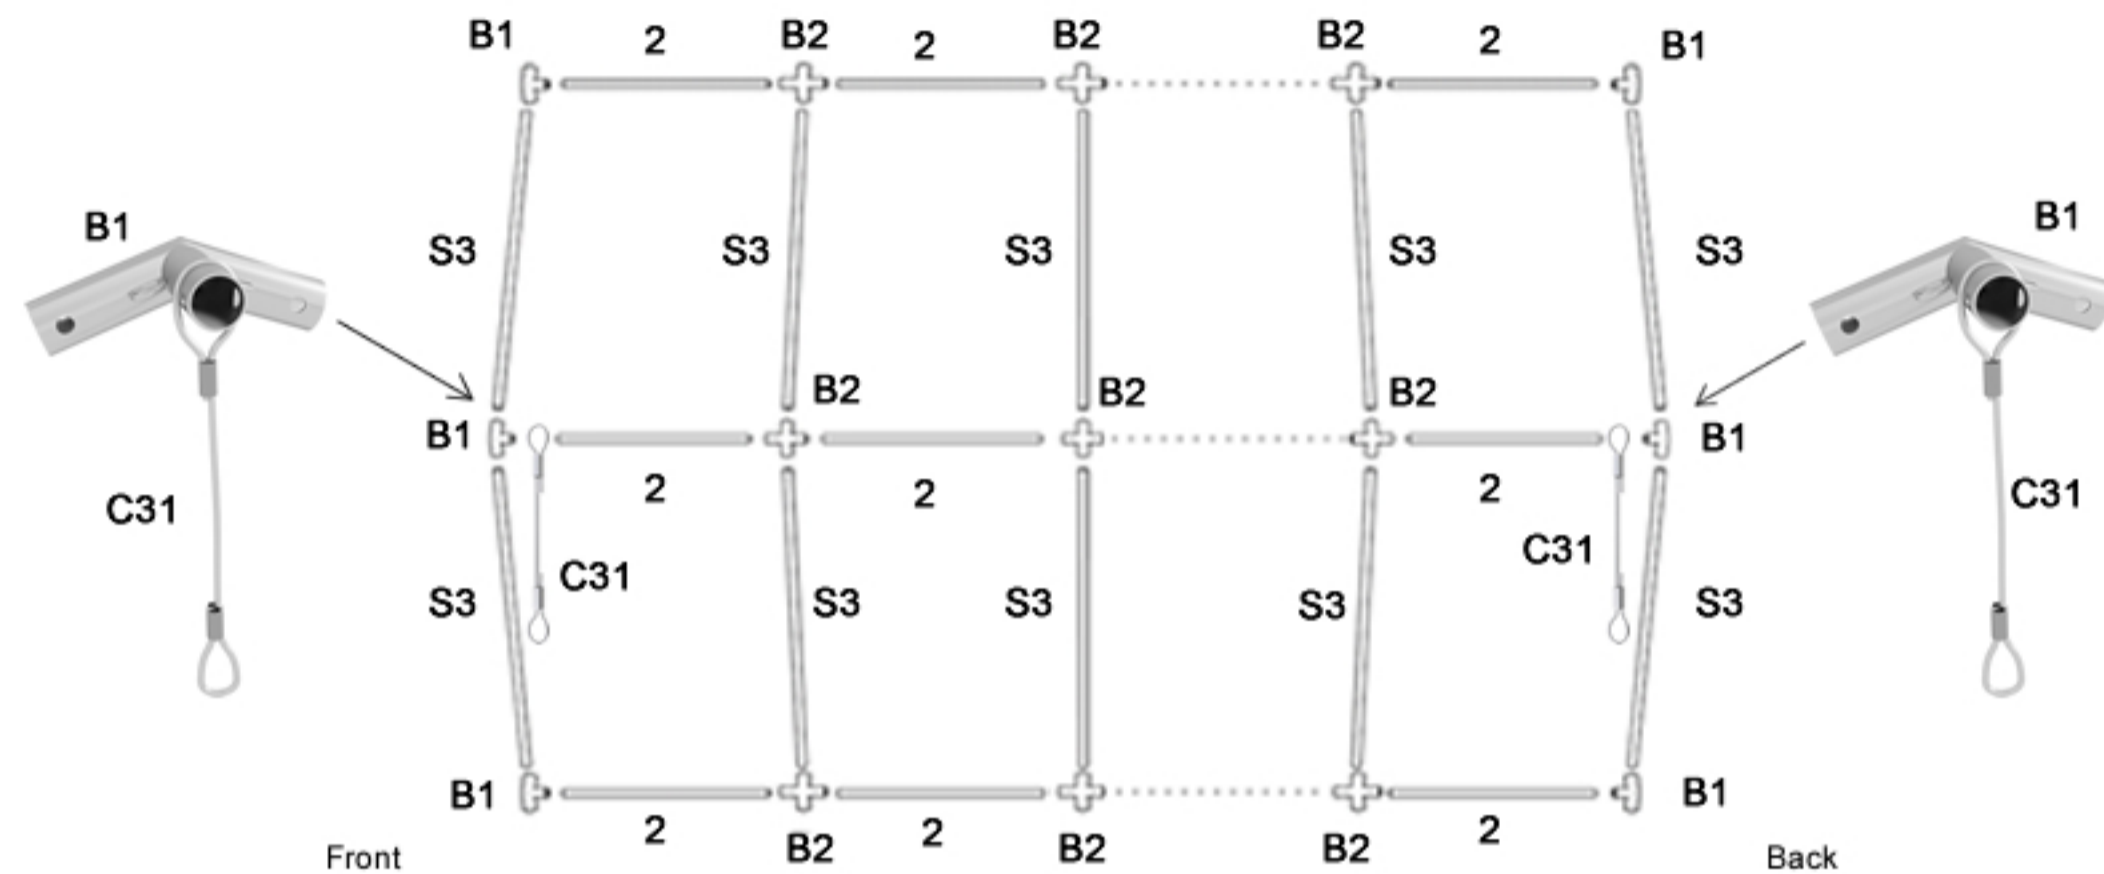


For the tents with the uneven length of the side eg. 9m, 11m, 13m, 21m, 31m.....

Distribute the parts as pictured below. Connect all the dia. 38 mm (Φ) tubes with the connectors using the M6x50 screws. Mount a vertical entry link (**C31**) on the triple corner connector (**B1**).

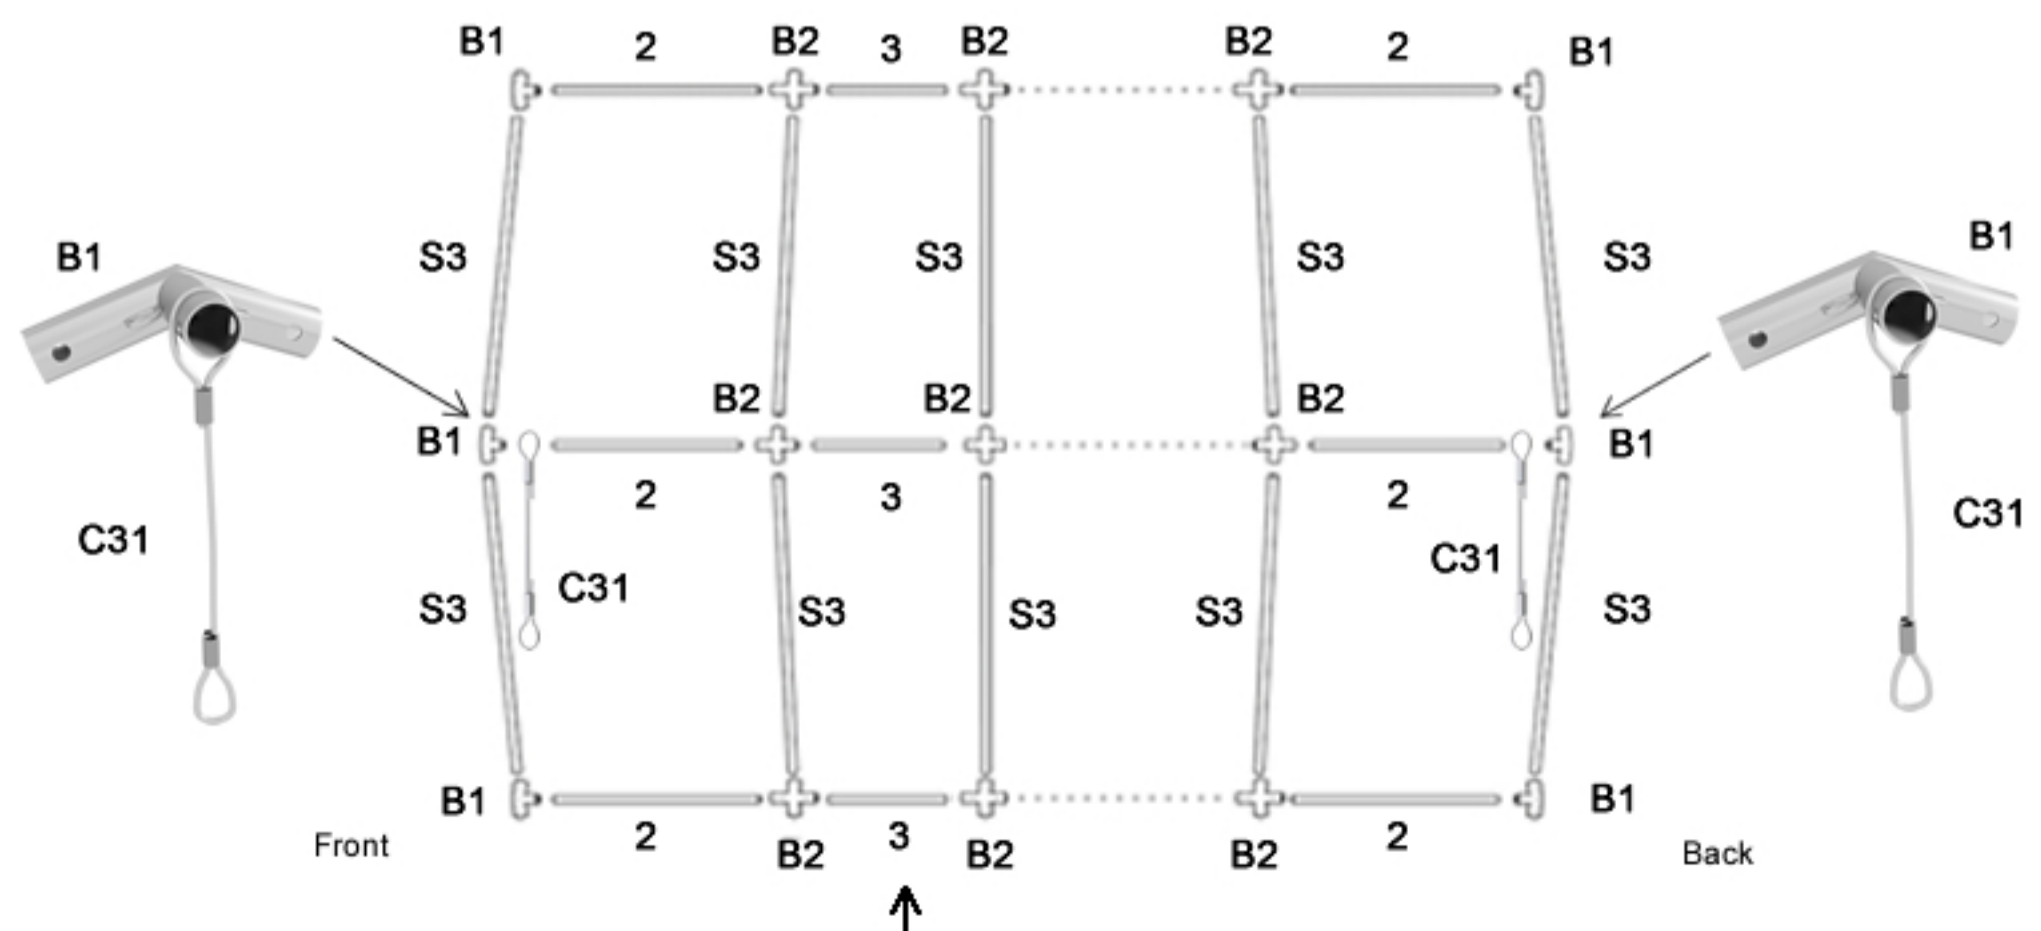


The extension tube (**3**) should be located in the second section.

STEP 2/a

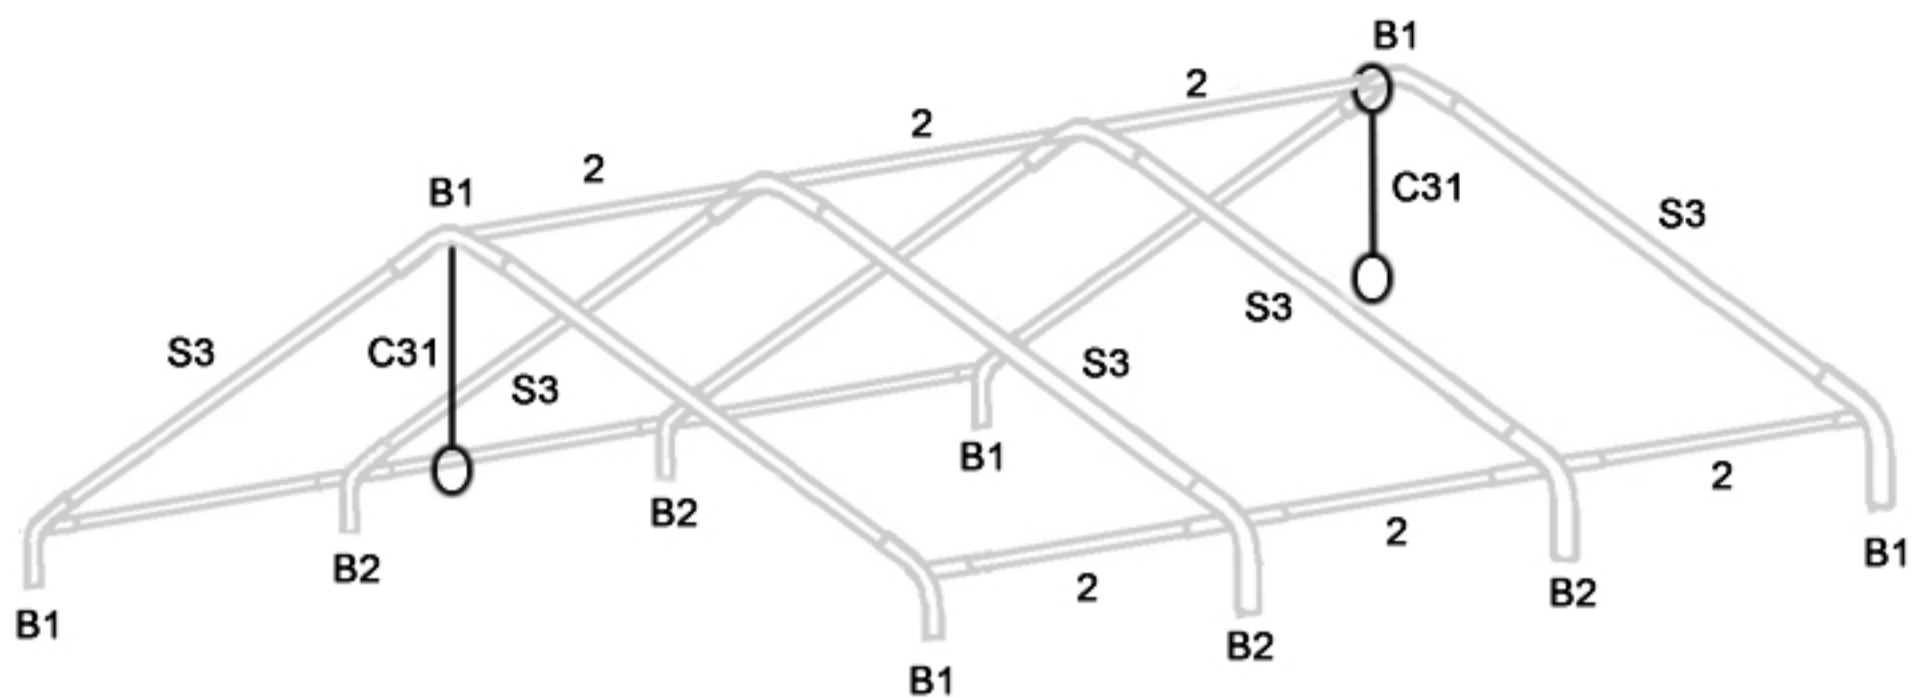


The assembled elements should look like pictured above.

Mount the entrance mounting bracket (**S0**) on the both sides of the tent. Using the screws (**15**) connect the brackets using the horizontal entry link (**C32**) which should come through the already mounted vertical link (**C31**).

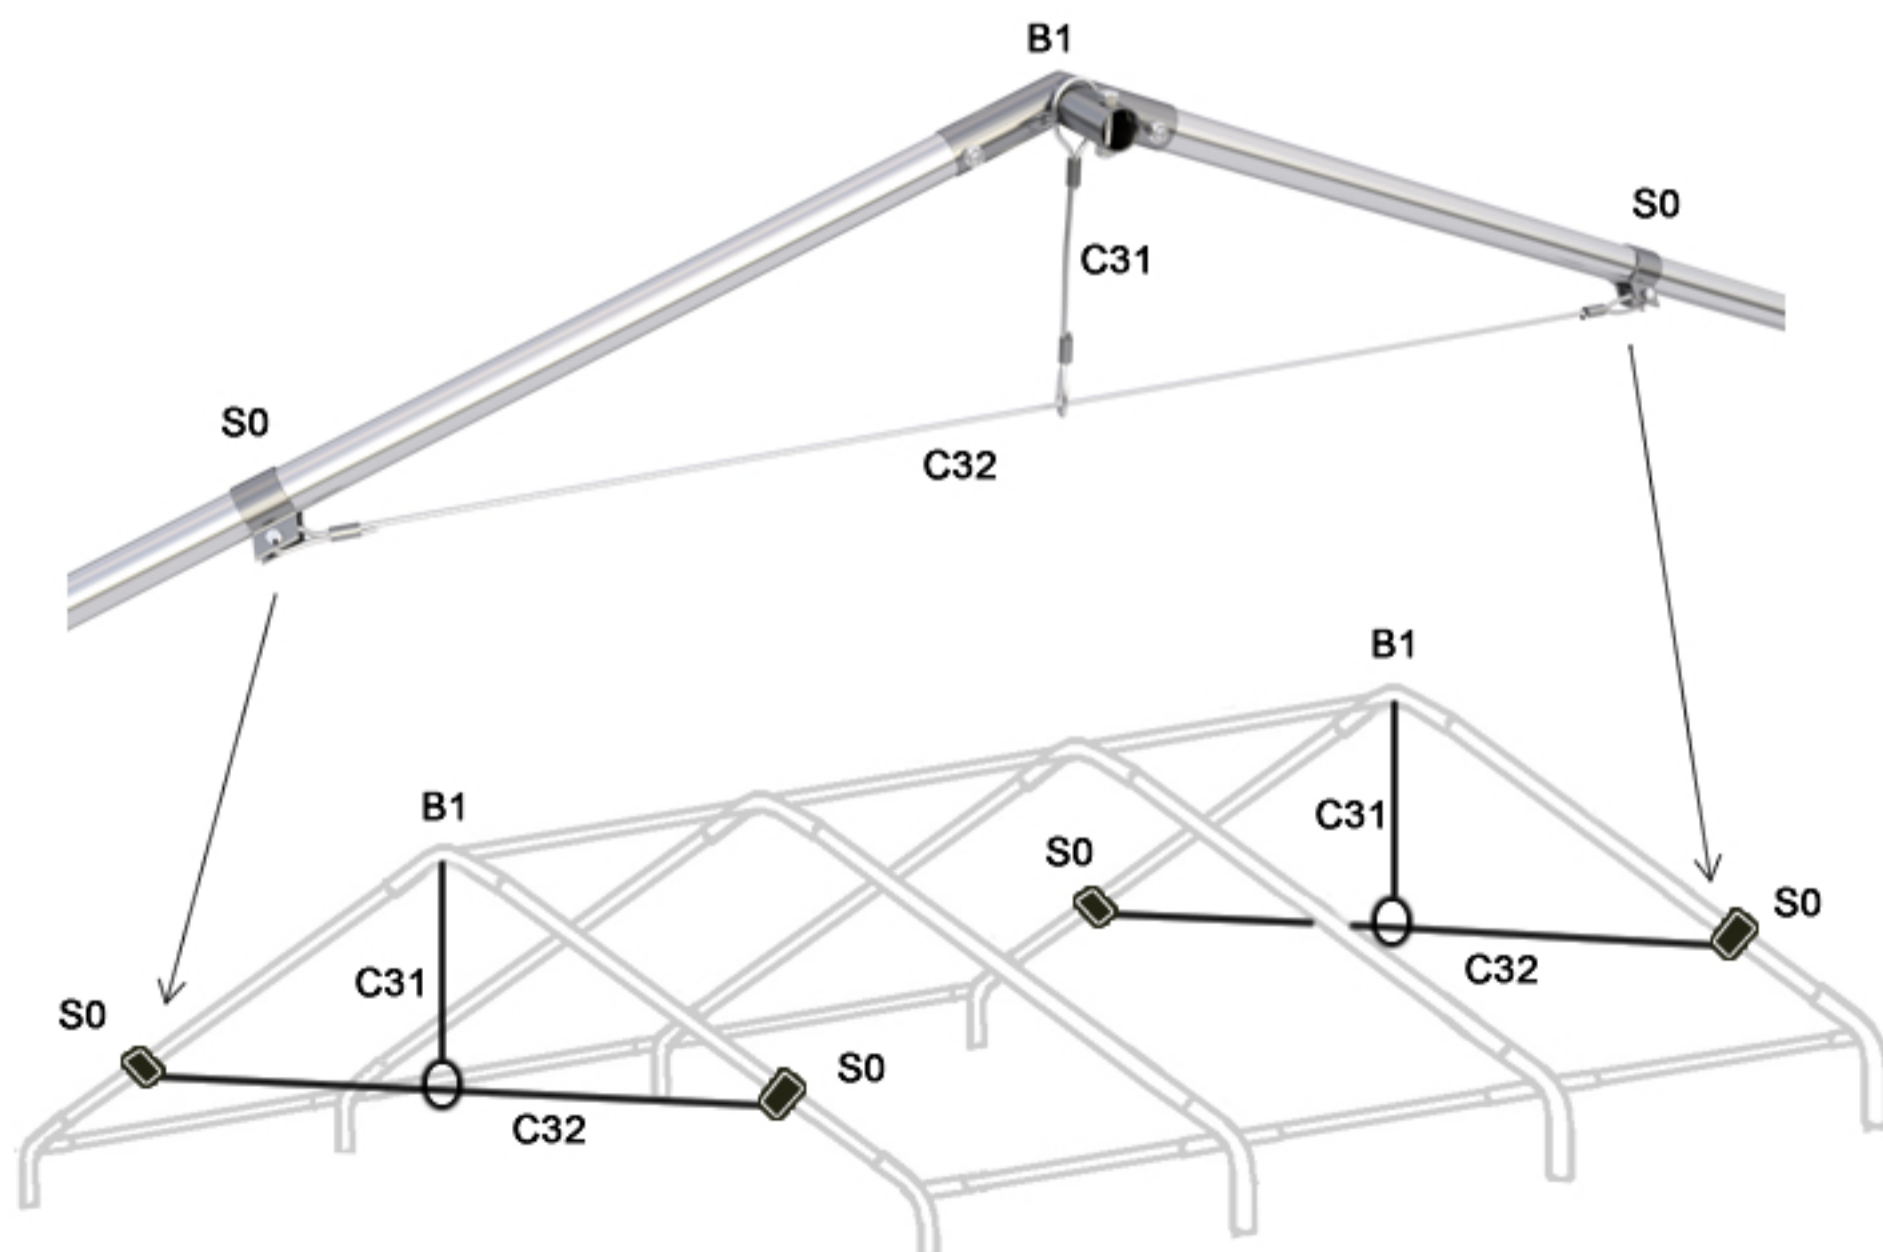

STEP 3



Gently lift the tent on one side and mount the tubes **(1)**. The tent's feet should be mounted with their hole outside. Next lift the tent on the other side and repeat the action.

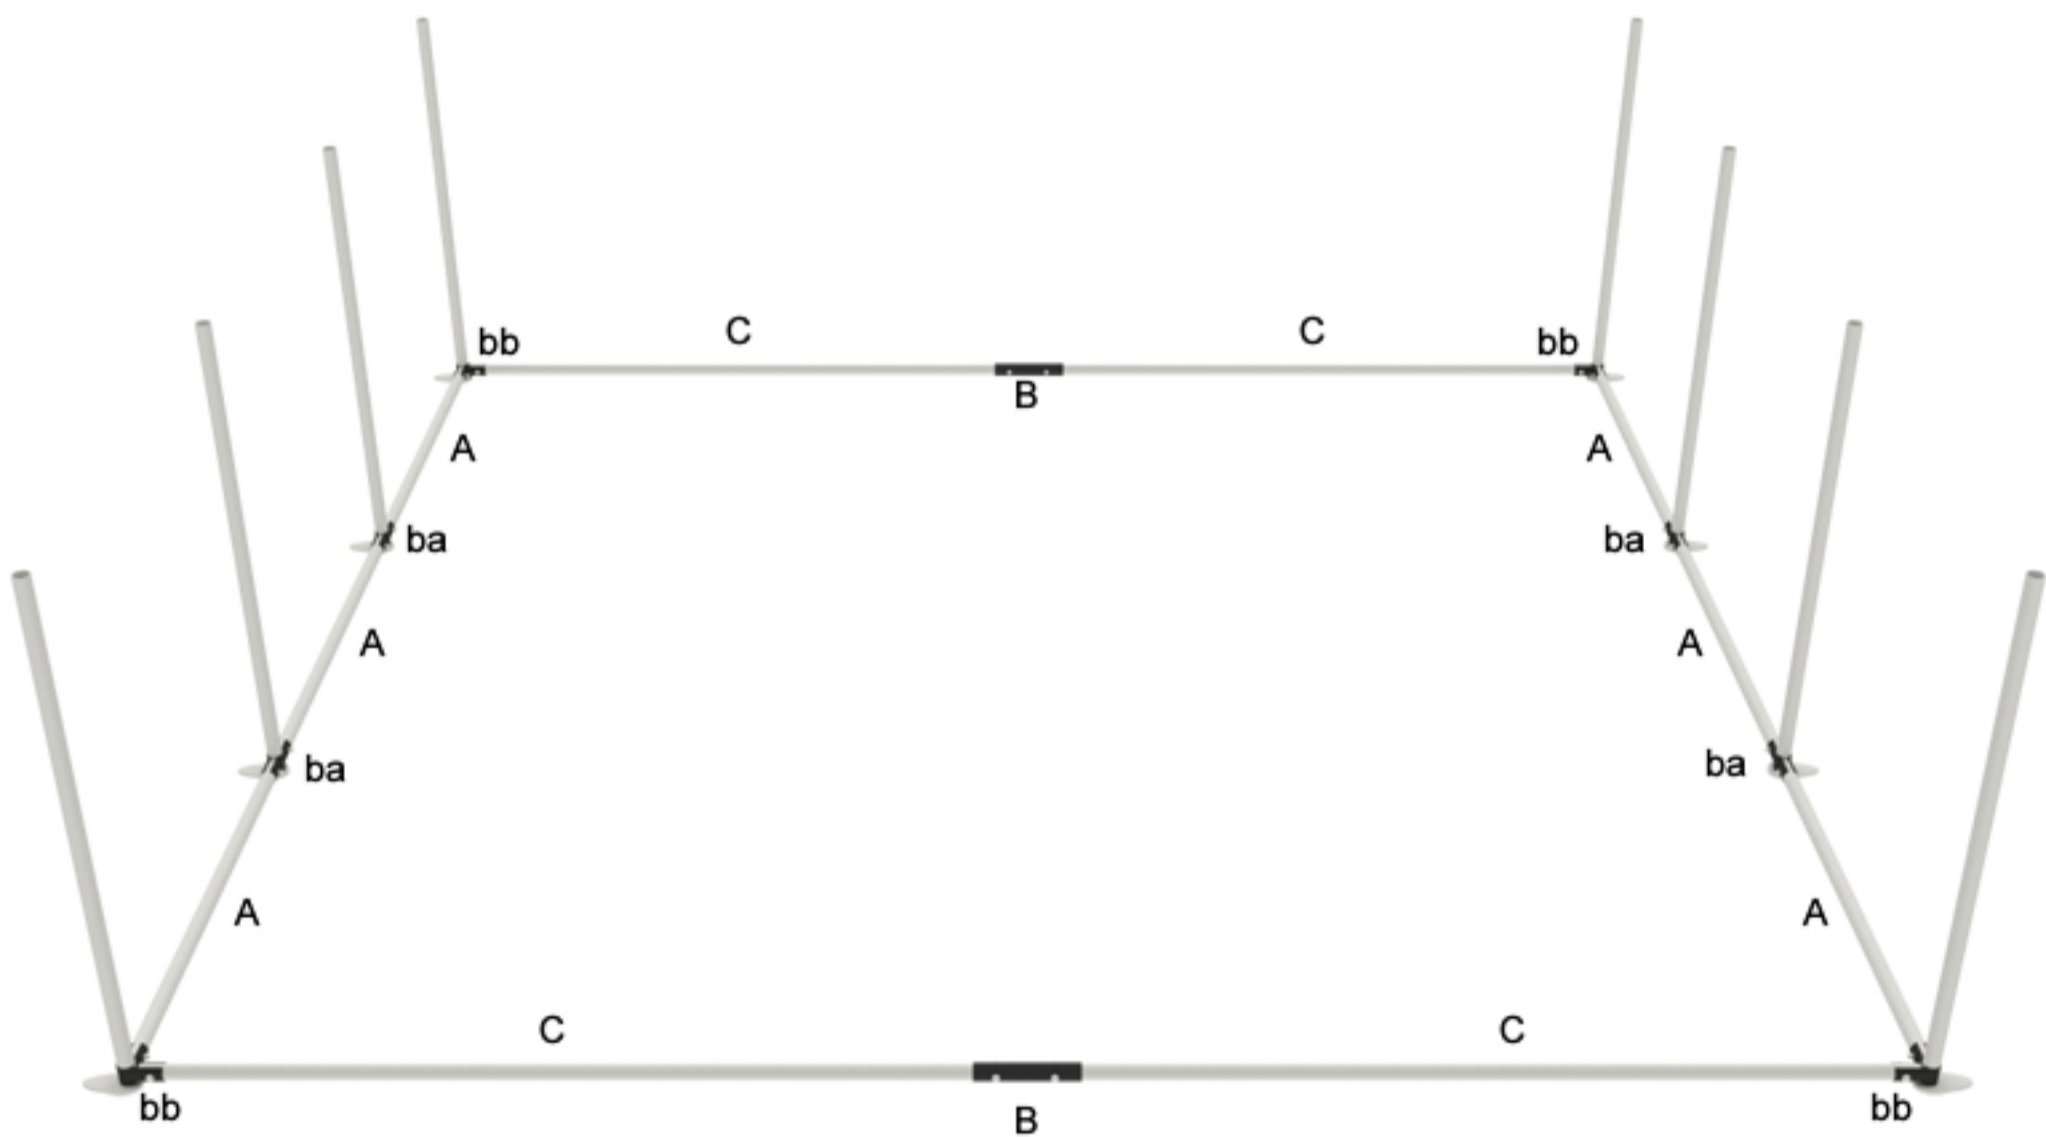

Floor construction should be mounted like it is shown on the picture above. Use S screws.

STEP 4

Side panels should be mounted directly to the roof using the velcro stripes. Sides of the panels should be mounted using the elastic rubber with the ball.

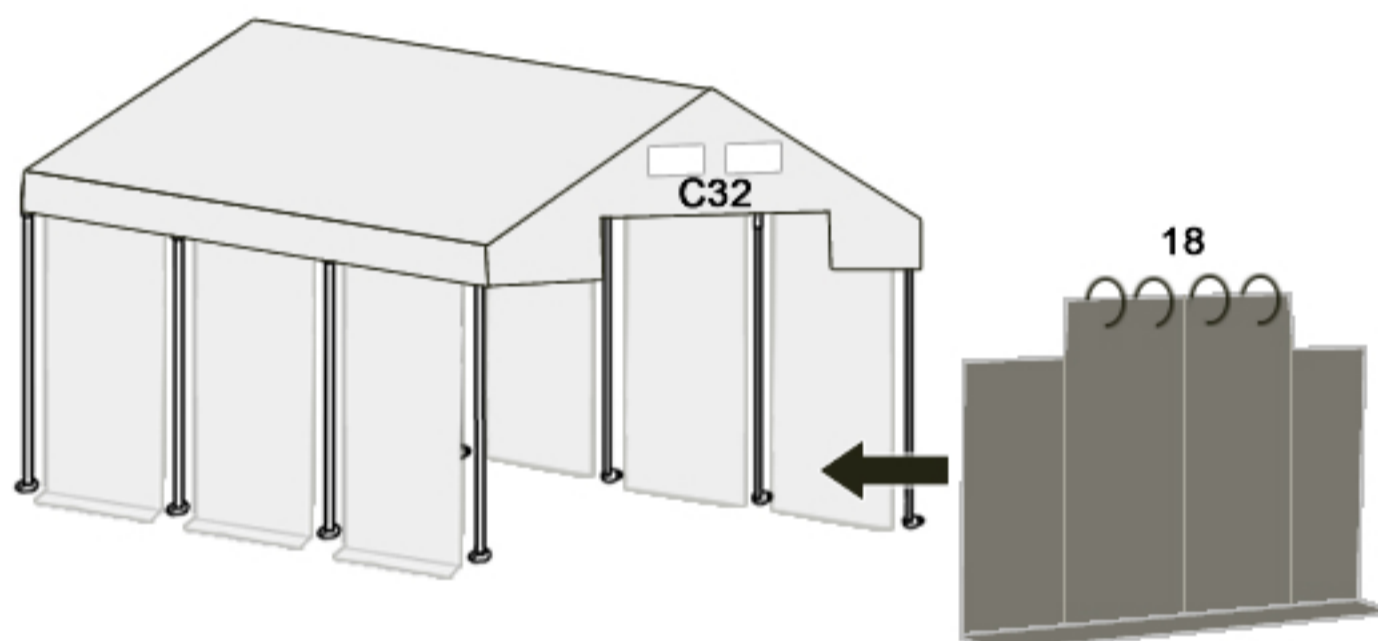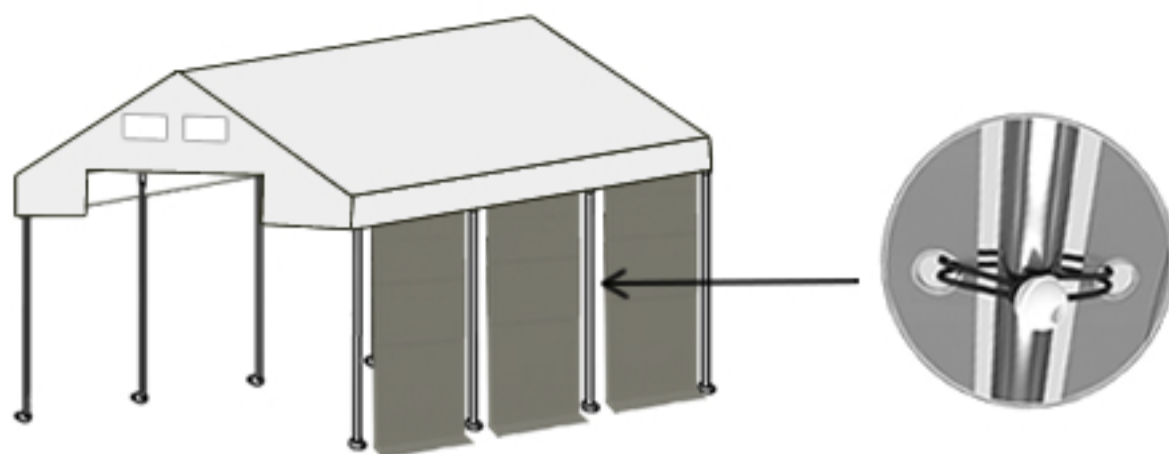

The upper part of the entrance using the metal brackets **(18)** to the vertical rope **(C32)**. The sides of the entrance should be mounted using the elastic rubber with the ball.

Mount the masking stripes. One of each of the four wider masking stripes should be installed on the each corner of the tent.

Fix the roof pulls on the corners of the tent using the **(14)** and **(11)** parts. All the lines should be tight.

